


快速 . 簡單 . 設定完成 !

1 準備您的數據機


拔除 您的纜線 /DSL 數據機電源，若數據機內含備用電池，請移除電池。❶

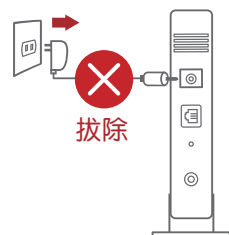


使用網路線連接您的數據機與路由器。



開啟您的纜線 /DSL 數據機。

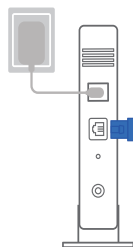


檢查您纜線 /DSL 數據機上的指示燈，確認已經連線。

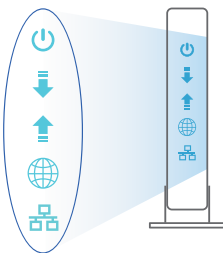


2 開啟您的路由器

將插頭與路由器背後的電源孔連接，並插上插座。

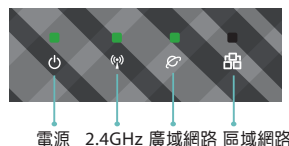

檢查廣域網路與 2.4G 指示燈，確認硬體已經連接。(請見下圖)

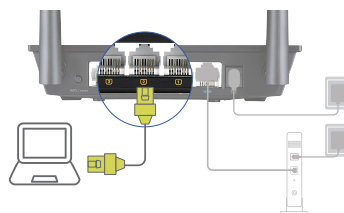


連接電腦與路由器

透過 Wi-Fi 或用網線 (本產品未包含) 將電腦連接到路由器。

3 登入與連線



開啟網頁瀏覽器，您將被重新導向 ASUS 安裝精靈。若未自動導向，請連至 <http://router.asus.com>

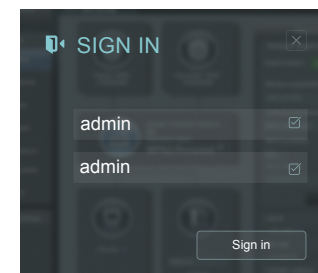

預設名稱與密碼皆為 **admin**，請依循安裝精靈完成設定，即可成功連線! (欲知詳情，請參閱使用手冊。)

安全性

建議您更改密碼以提高安全性。更改路由器的預設設定後，請重新啟動路由器。


路由器	登入名稱	
	密碼	
2.4 GHz	網路名稱 (SSID)	
	密碼	

❶ 若您使用 DSL 連接網際網路，將會需要向您的網際網路服務供應商 (ISP) 取得登入名稱 / 密碼，以正確安裝您的路由器。


Fast. Easy. Setup!

1 Prepare your Modem


Unplug your cable/DSL modem. If it has a battery backup, remove the battery. 1

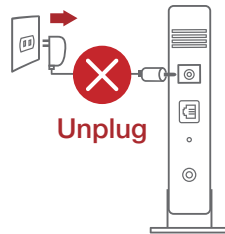


Connect your modem to the router with the network cable provided.

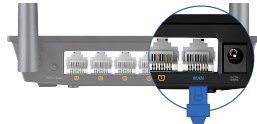

Power on your cable/DSL modem.

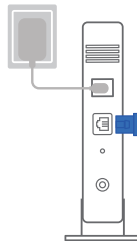


Check your cable/DSL modem LED lights to ensure the connection is active.

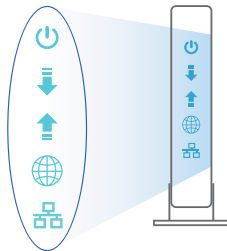

1 If you are using DSL for internet, you will need your username/password from your Internet service provider (ISP) to properly configure your router.


2 Power on your Router

Plug in the power adapter.

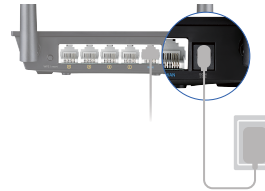

Power 2.4GHz WAN LAN

Check the WAN and 2.4G LED lights to ensure the hardware connection is ready (see the picture above).

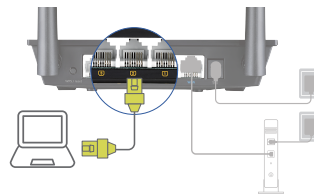


Connect your PC to the router via Wi-Fi or using an additional network cable (not included).

3 Login and Connect



Open a web browser. You will be redirected to the ASUS Setup Wizard. If not, navigate to <http://router.asus.com>

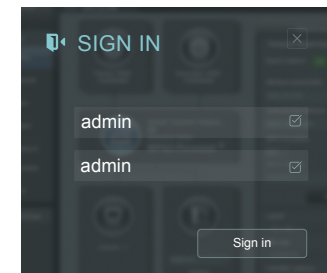

Login using 'admin' as both user name and password. Follow the wizard to complete setup. Then you're connected! (For more help please refer to the user manual).

Security

We recommend changing your password for increased security. Reboot the router after changing default settings.

Router	Login Name	
	Password	
2.4 GHz	Network Name(SSID)	
	Password	